

Quick Start Guide

TC ELECTRONIC BRAINWAVES PITCH SHIFTER

USB - Connects to your computer for firmware updates and TonePrint editing.

FX Type - Selects between pitch effects and TonePrint 1-3.

Up/Down - Selects whether the associated Voice knob will shift the pitch up or down.

Mix - Adjusts the balance between the dry and the pitch-shifted signal.

Outputs

Footswitch - Tap footswitch to turn effect on or off. Push down and hold to engage MASH and control the selected parameter.

Power - Connect a 9V / >100 mA power supply.

MASH LED - Indicates the intensity of the MASH function.

Voice 1/2 - Determines the number of semitones each voice is pitch-shifted.



Visit tcelectronic.com to download the full manual

Specification

Connectors

Inputs	2 x ¼" TS, unbalanced, mono
Impedance	1 MΩ
Outputs	2 x ¼" TS, unbalanced, mono
Impedance	100 Ω
USB port	Mini USB connector for firmware updates and TonePrints
Bypass mode	True bypass (buffered bypass optional)

Power

Connector	Standard 9 V DC, center negative, >100 mA power supply (not included)
Battery option	9 V battery (not included)

Physical

Dimensions (H x W x D)	50 x 74 x 122 mm (2.0 x 2.9 x 4.8")
Weight	0.34 kg (0.75 lbs)